LOWER OVEN CABINET

For Model: SS373PEX1

30" GAS
SLIDE−IN RANGE
SOLID−STATE IGNITION
SELF−CLEAN OVEN

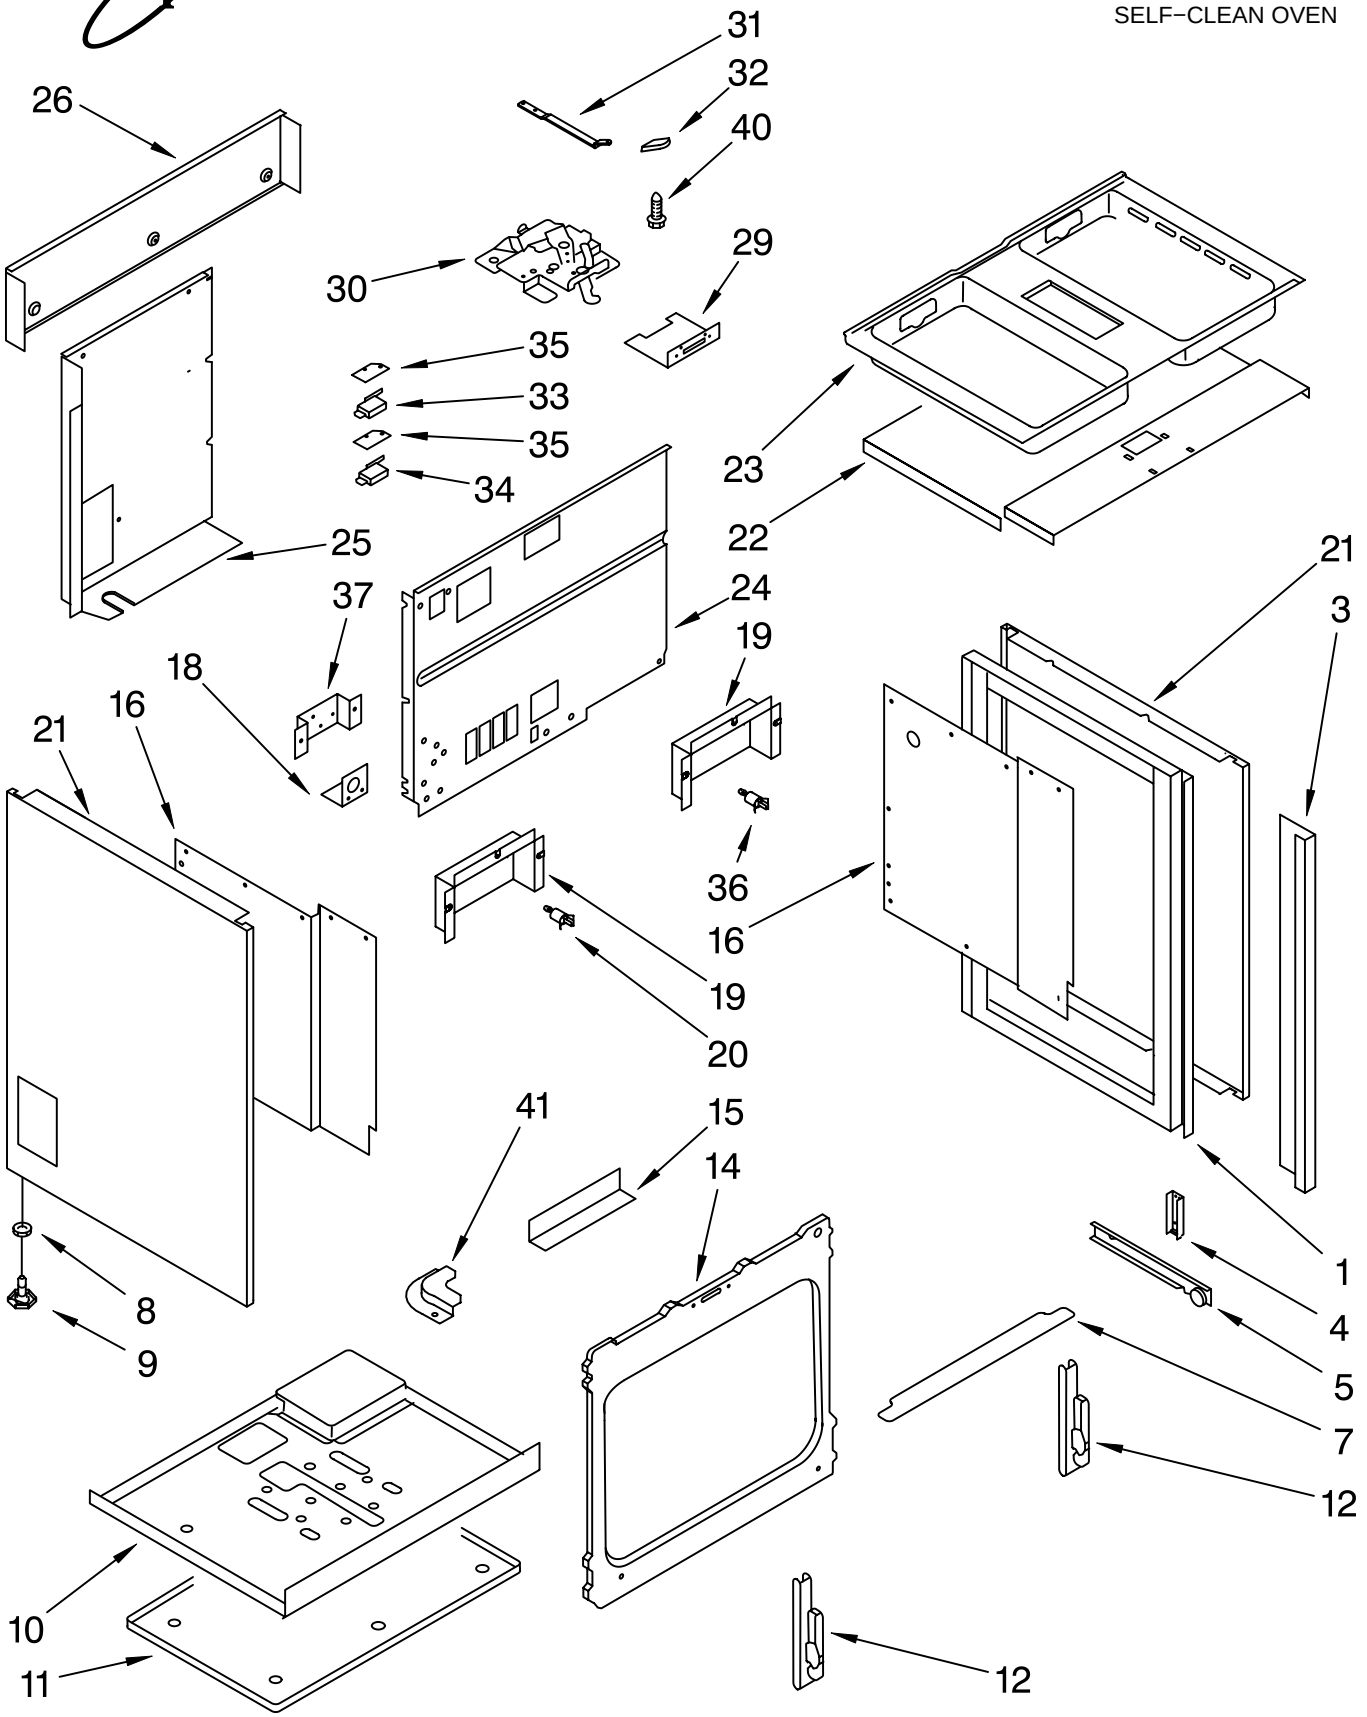

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LOWER OVEN CABINET

For Model: SS373PEX1

Illus. No.	Part No.	DESCRIPTION
1		Frame, Side
	4362654	L.H.
	4315674	R.H.
3	4321011	Trim, Panel Side
4	4321012	Support, Drawer
5		Track Drawer
	4321013	L.H.
	4321014	R.H.
7	4315118	Filler, Front Frame
8	4157527	Teenut
9	786602	Leveling Leg
10	4315114	Retainer, Insulation Bottom
11	4321070	Heat Shield Drawer
12		Hinge, Door
	786739	L.H.
	786374	R.H.
14	4362535	Front Frame (Not Serviceable)
15	4362665	Heat Shield Clock
16		Retainer Insulation Side
	4321017	L.H.
	4321016	R.H.
18	4321018	Bracket, Conduit
19	4321071	Cover, P.C. Board
20	4315254	Support, P.C. Board
21		Panel, Side
	786369	R.H.
	4321019	L.H.
22	4362603	Retainer, Top
23	4321072	Burner Box
24	4321021	Retainer, Rear Insulation
25	4321022	Cover, Wire Rear
26	4321023	Shield, Rear
29	786378	Bracket, Mounting Latch
30	4362636	Latch, Oven Door
31	4320864	Latch Arm
32	4320863	Knob Latch
33	786127	Switch, Latch Upper
34	786669	Switch, Latch Lower
35	786380	Insulator, Latch
36	4321026	Support, Clock P.C. Board
37	4321073	Bracket Terminal Board
	786381	Bracket, Latch
	4315273	Bracket, Self−Clean
40	786284	Screw, Latch Knob 8−32 X 5/16
41	4315756	Anti−Tip Kit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

VENTILATION PARTS

For Model: SS373PEX1

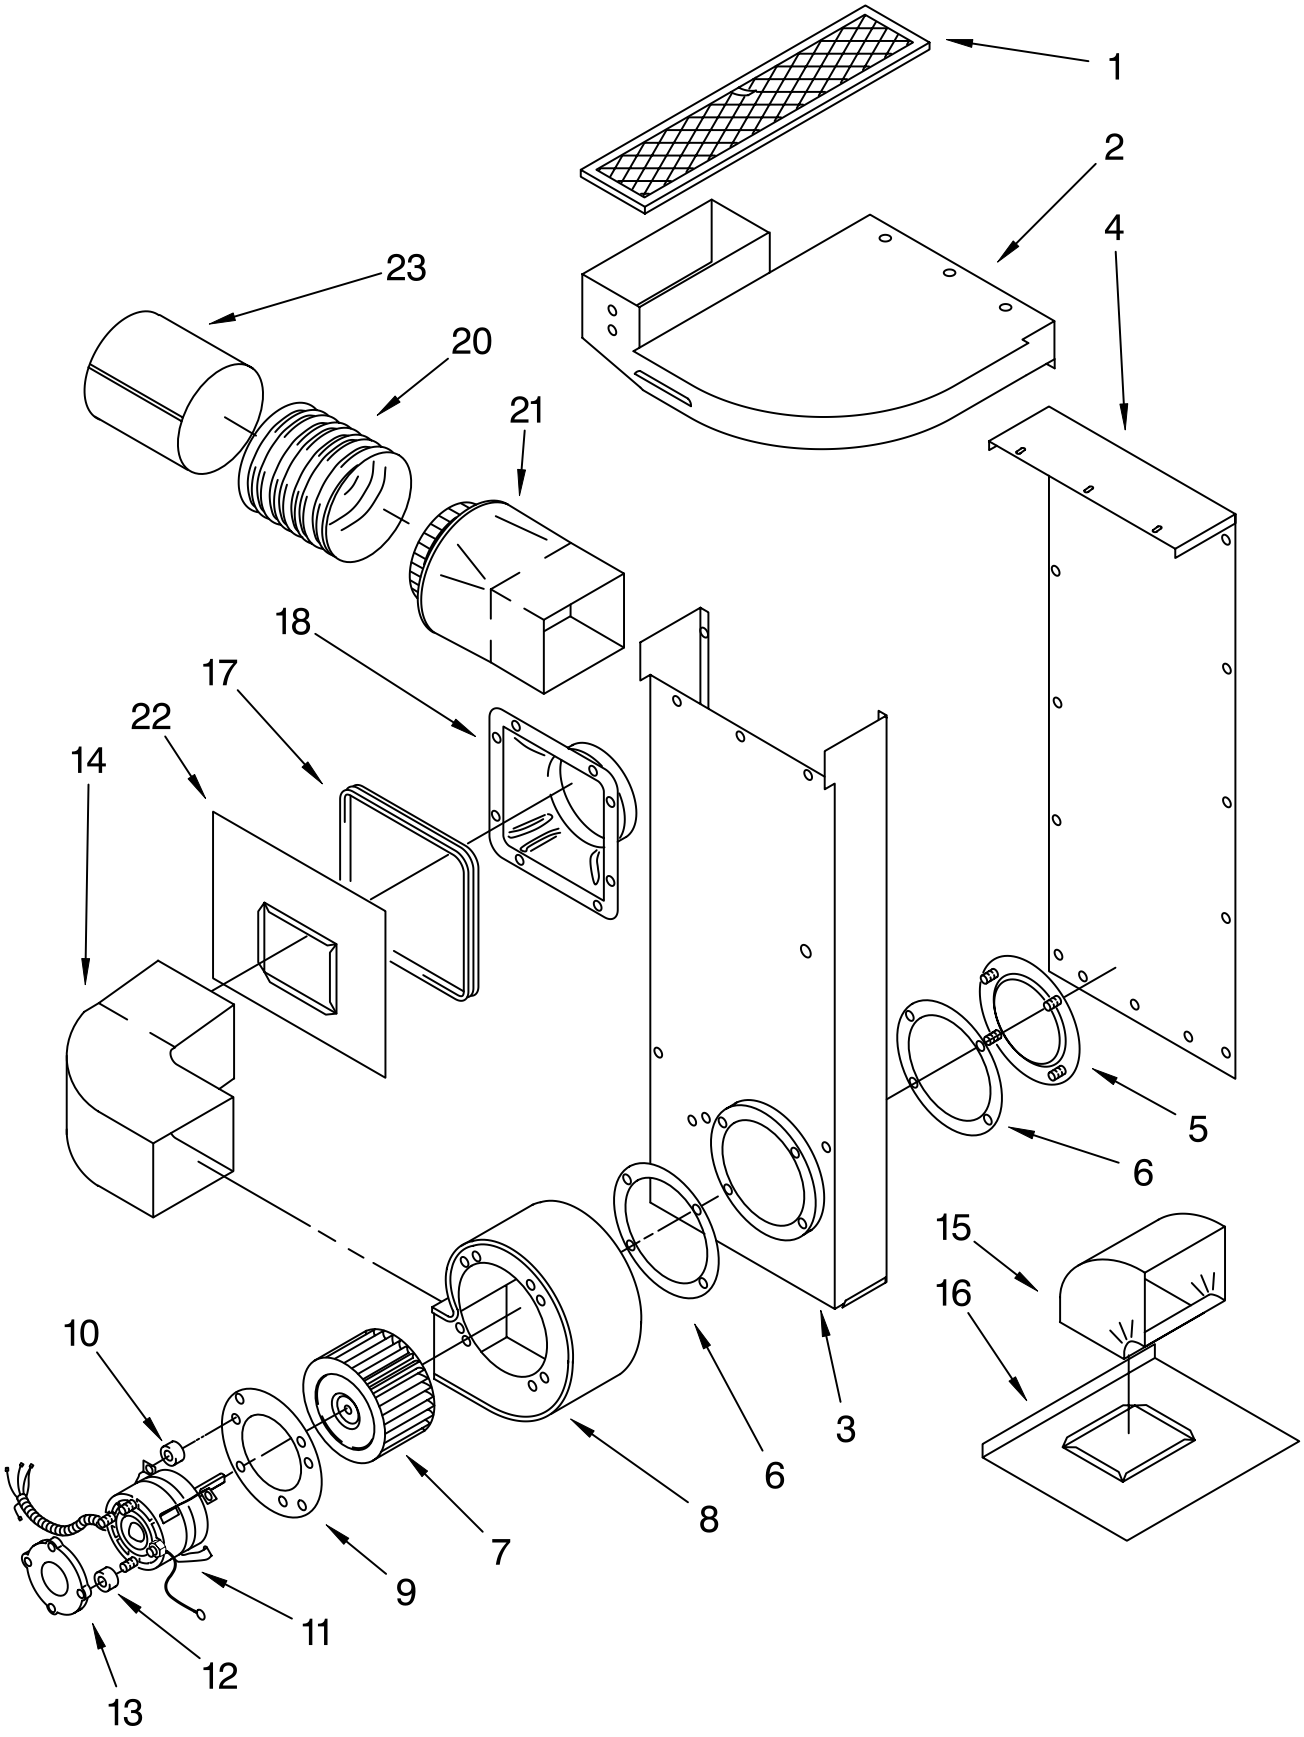

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

VENTILATION PARTS

For Model: SS373PEX1

Illus. No.	Part No.	DESCRIPTION
1	4321000	Filter
2	4321053	Pelnum Top
3	4321074	Pelnum Rear
4	4321054	Cover, Pelnum Rear
5	4179324	Orifice
6	4179303	Gasket, Fan Scroll
7	786155	Wheel Blower
8	4321055	Housing Blower
9	4314921	Plate, Motor Mounting
10	786234	Grommet, Rubber (3)
11	4315281	Motor Blower
12	4314926	Spacer, Motor Cover (4)
13	4314924	Motor Cover
14	4321056	Duct, Wall
15	4321057	Duct, Floor
16	4321058	Plate, Duct−Floor
17	4321059	Gasket, Transition Wall−Floor
18	4321060	Transitior, Wall
20	4321061	Duct Side
21	786156	Transition, Side
22	4321063	Plate, Duct Wall
23	4321062	Tube, Transition
	786267	Nut, Motor Cover Retainer (4)
	4314922	Bolt, Blower Motor (3)
	4314923	Washer, Blower Motor (3)
	786439	Nut, Blower Motor Mounting (3)

LITERATURE PARTS

LIT4320704	Guide, Use & Care
LIT4363123	Installation Instructions

MAINTOP AND OVEN PARTS

For Model: SS373PEX1

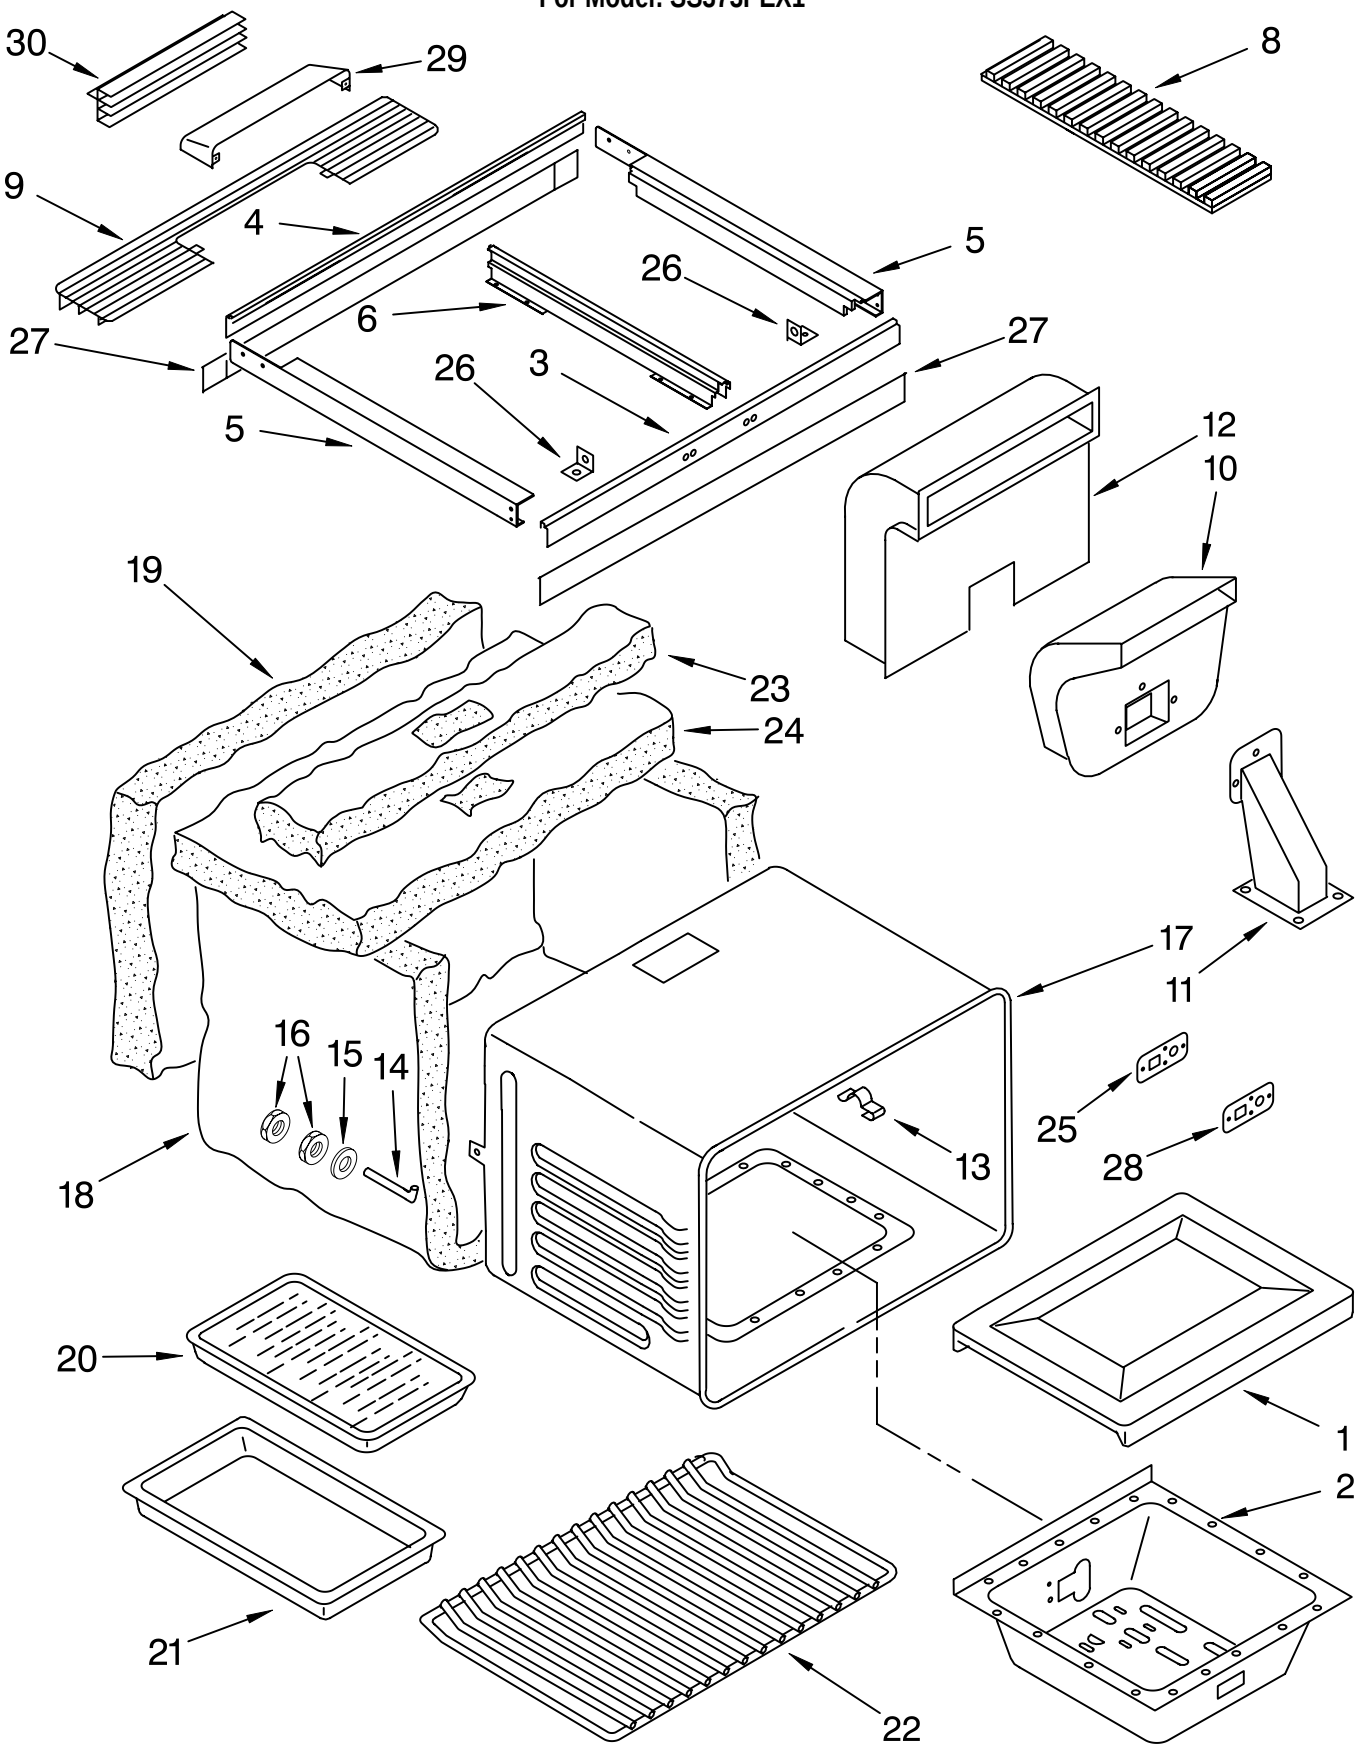

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MAINTOP AND OVEN PARTS

For Model: SS373PEX1

Illus. No.	Part No.	DESCRIPTION
1	4315114	Oven Bottom
2	786336	Box, Burner
3	4320998	Frame, Maintop Front
4	4321138	Frame, Maintop Rear
5		Frame, Maintop
	4362591	L.H. Side
	4362592	R.H. Side
6	4320999	Frame, Maintop Center
8	4321001	Cover, Vent
9	4362625	Backrail, Lo
10	4320929	Bracket, Flue Support
11	4320951	Vent
	4320930	Gasket, Vent
12	4320924	Flue, Dillution
13	4315098	Cover, Chip
14	786350	Hook−Bolt, Oven Shell
15	786351	Washer
16	786352	Nut, Hex 10−32
17	4362623	Oven Shell
18	4321005	Insulation, Wrapper
19	4321006	Insulation, Back
20	786346	Grid, Broiler
21	4315109	Pan, Broiler
22	786347	Oven Rack
23	4362667	Insulation, Door Latch
24	4321008	Insulation, Top
25	4320944	Gasket, Plate
26	4321010	Bracket, Fram Trim
27		Support, Maintop
	4362605	Front
	4362606	Rear
28	4320952	Plate, Broiler
29	4362640	Trim, Flue
30	4362638	Cover, Flue

OVEN DOOR AND DRAWER PARTS

For Model: SS373PEX1

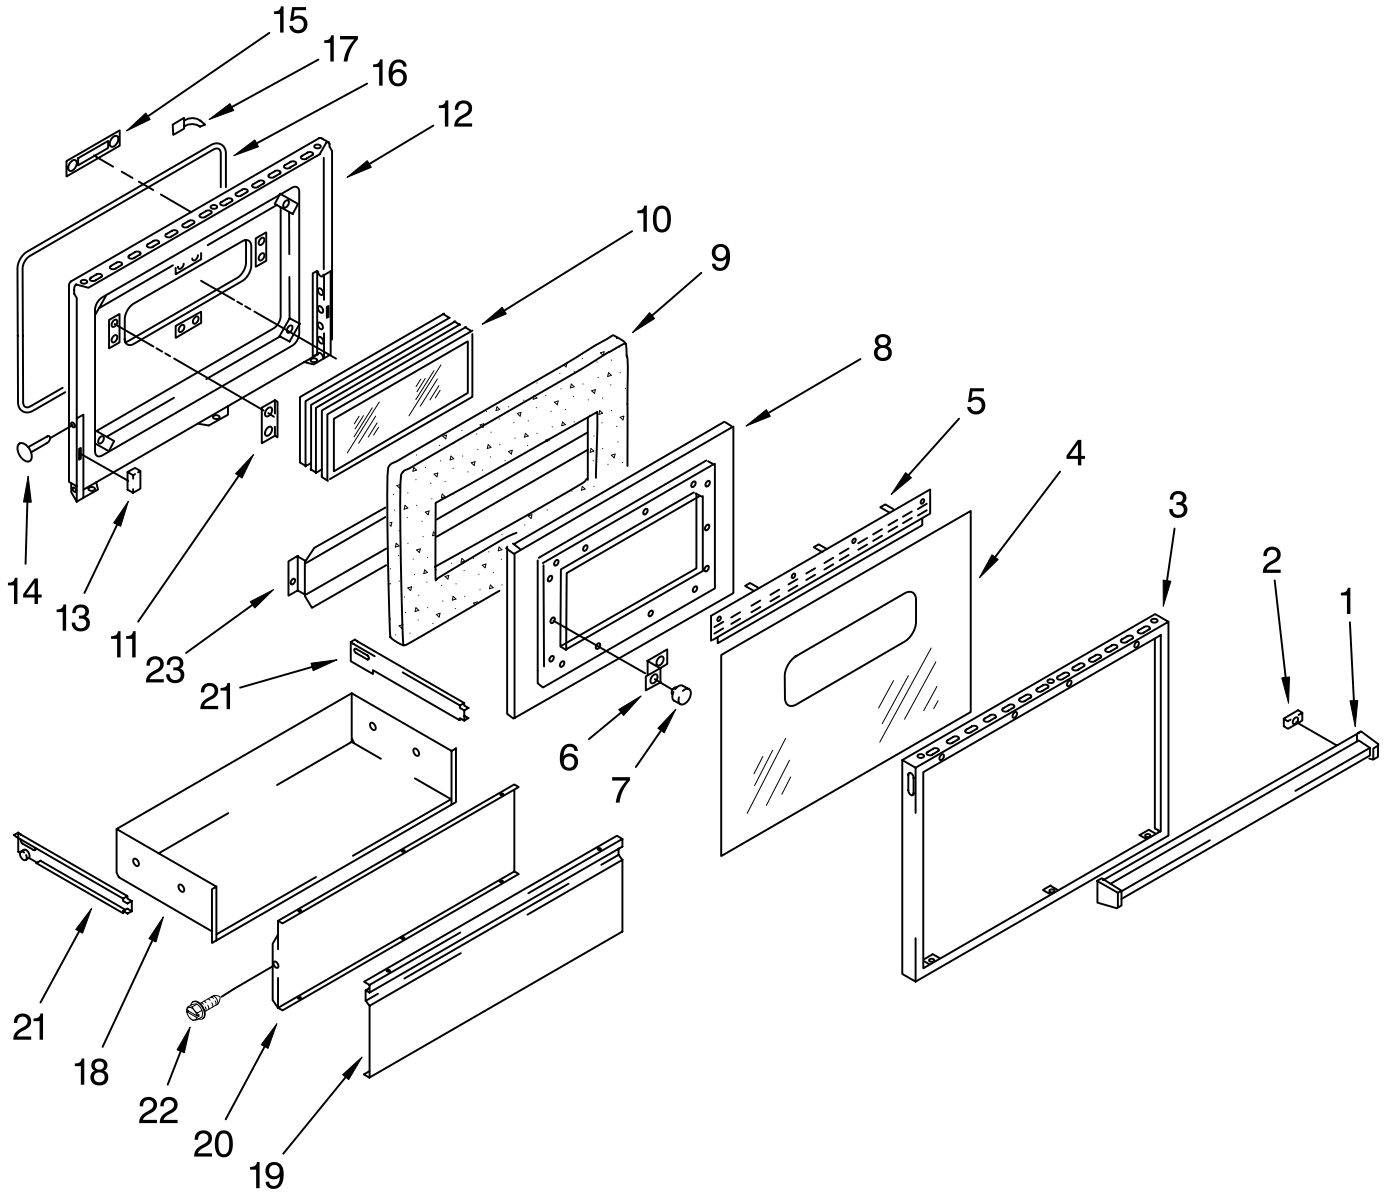

Illus. No.	Part No.	DESCRIPTION
1	4362534	Handle, Door
2	786410	Spacer
3	786417	Frame
4	4320971	Glass, Black
5	4320849	Trim, Top
6	786425	Support, Glass (3)
7	786526	Bumper, Rubber (3)
8	4320875	Backer, Door
9	4315673	Insulation
10	4362602	Window Assembly
11	4179236	Retainer, Glass
12	4320300	Liner
13	4179237	Bumper (2)
14	786428	Pin−Hinge (2)
15	786671	Plate, Latch
16	4320302	Gasket, Door
17	786426	Clip
18	4321029	Drawer
19	4314976	Panel, Front
20	4315696	Liner, Front
21		Runner
	4321030	L.H.
	4321031	R.H.
22	786756	Screw
23	4363316	Baffle, Heat

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MANIFOLD PARTS

For Model: SS373PEX1

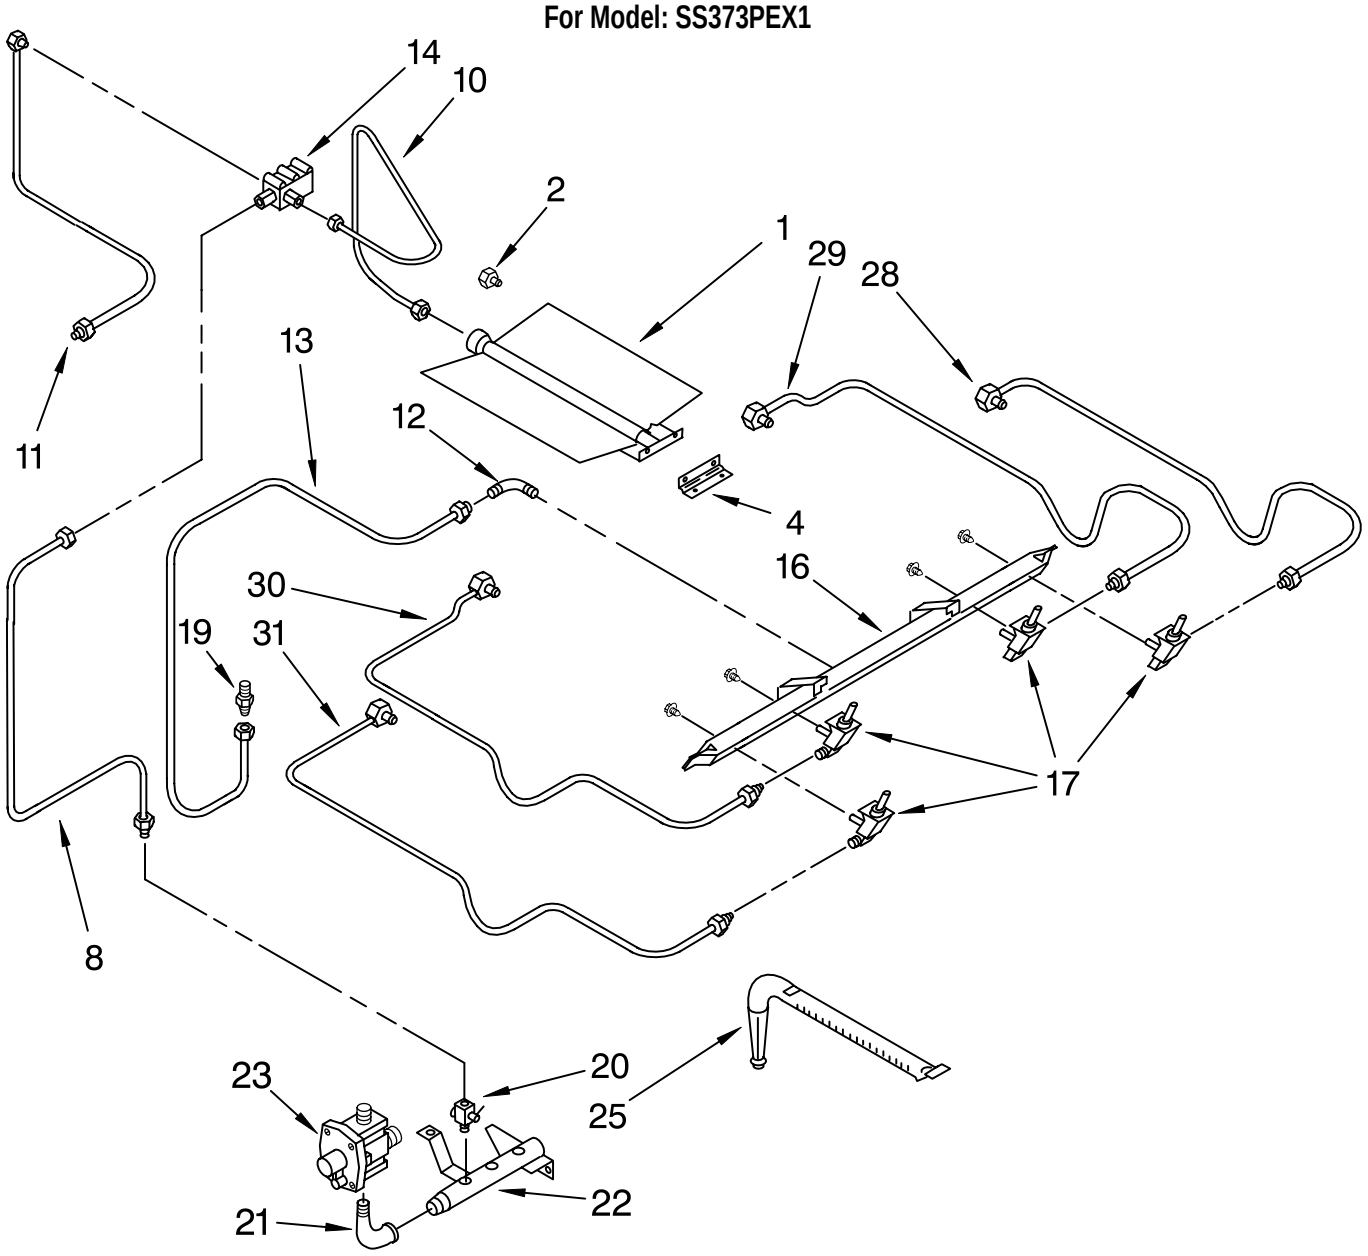

Illus. No.	Part No.	DESCRIPTION
1	4320907	Burner, Broiler
2	4362634	Orifice, Broiler
4	4320888	Bracket, Burner Mounting
8	4362648	Tubing (Inlet To Gas Valve)
10	4362639	Tubing Assembly (Gas Valve To Broiler Burner)
	786741	Nut (2)

Illus. No.	Part No.	DESCRIPTION
11	4362635	Hood & Tubing Assembly (Gas Valve To Lower Oven Burner)
	786741	Nut
12	4362691	Elbow, Manifold
13	4362647	Tubing, Inlet To Manifold
14	4362692	Valve, Dual Gas
16	4362693	Manifold (2)
17		Valve, Burner
	4362645	Right (2)
	4362646	Left (2)

Illus. No.	Part No.	DESCRIPTION
19	4320319	Fitting
20	4362689	Valve, Shut−Off
21	4157520	Elbow
22	4362641	Inlet
23	4362637	Regulator, Pressure
25	4362651	Burner, Oven
28	4362629	Tubing R.F.
29	4362630	Tubing R.R.
30	4362631	Tubing L.R.
31	4362632	Tubing L.F.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: SS373PEX1

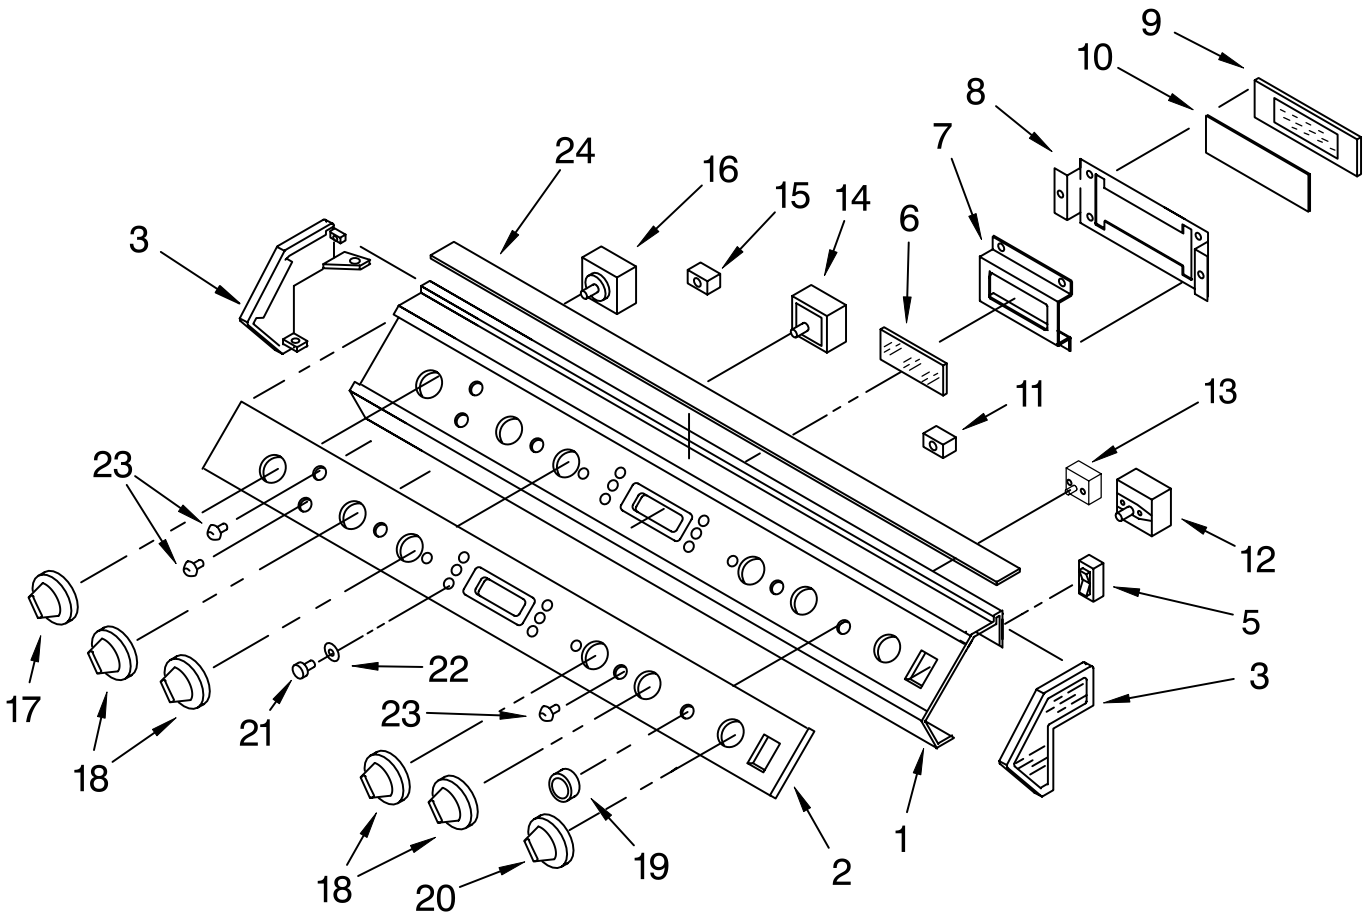

Illus. No.	Part No.	DESCRIPTION
1	4362686	Control Panel Panel
	4362685	Glass, Insert
2	4321033	Inlay, Control
3		End Cap
	4321034	Right Hand
	4321035	Left Hand
5	4320853	Switch, Oven Light
6	4321036	Glass, Clock
7	4321037	Bracket, Clock Glass
8	4321038	Bracket, Clock
	4321039	Screw, Bracket
9	4321040	Clock/Timer
10	4321041	Lens− Clock
11	4315016	Light, Indicator
12	4179076	Switch, Selector
		Element
	786228	Screw,
13	4321043	Switch, Fan
	786245	Screw
14	4320941	Switch, Infinite
	786228	Screw
15	786306	Light, Indicator Oven
16	4362642	Thermostat
	786228	Screw
17	4362687	Knob, Thermostat
18	4362688	Knob, Surface
19	4321046	Knob, Fan Switch
20	4320738	Knob, Selector Switch
21	4321048	Button, Clock
22	4321049	Bushing, Clock Button
23	4321050	Lens, Indicator Light
24	4321051	Insert, Control Panel

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP MODULE PARTS

For Model: SS373PEX1

Illus. No.	Part No.	DESCRIPTION
1	4321182	Module Top
2	786110	Module Pan
4	4321286	Burner Front
5	4321287	Burner Rear
7	786113	Support, Burner Base
8	786114	Support, Venturi
9	786117	Connector Electrode
10	786279	Electrode
11	786262	Screw, 8 X 3/8
12	786703	Grate, Top Burner
13	786280	Clip, Top Mounting
14	786281	Pop Rivet (4)
15	786282	U−Clip (2)
16	786204	Pin, Grounding
17	786231	Screw, 8−32 X 3/16
18	786283	Lockwasher #8
19	786284	Screw, 8−32 X 5/16
20	4321110	Burner Cap
21	4320715	Module Complete

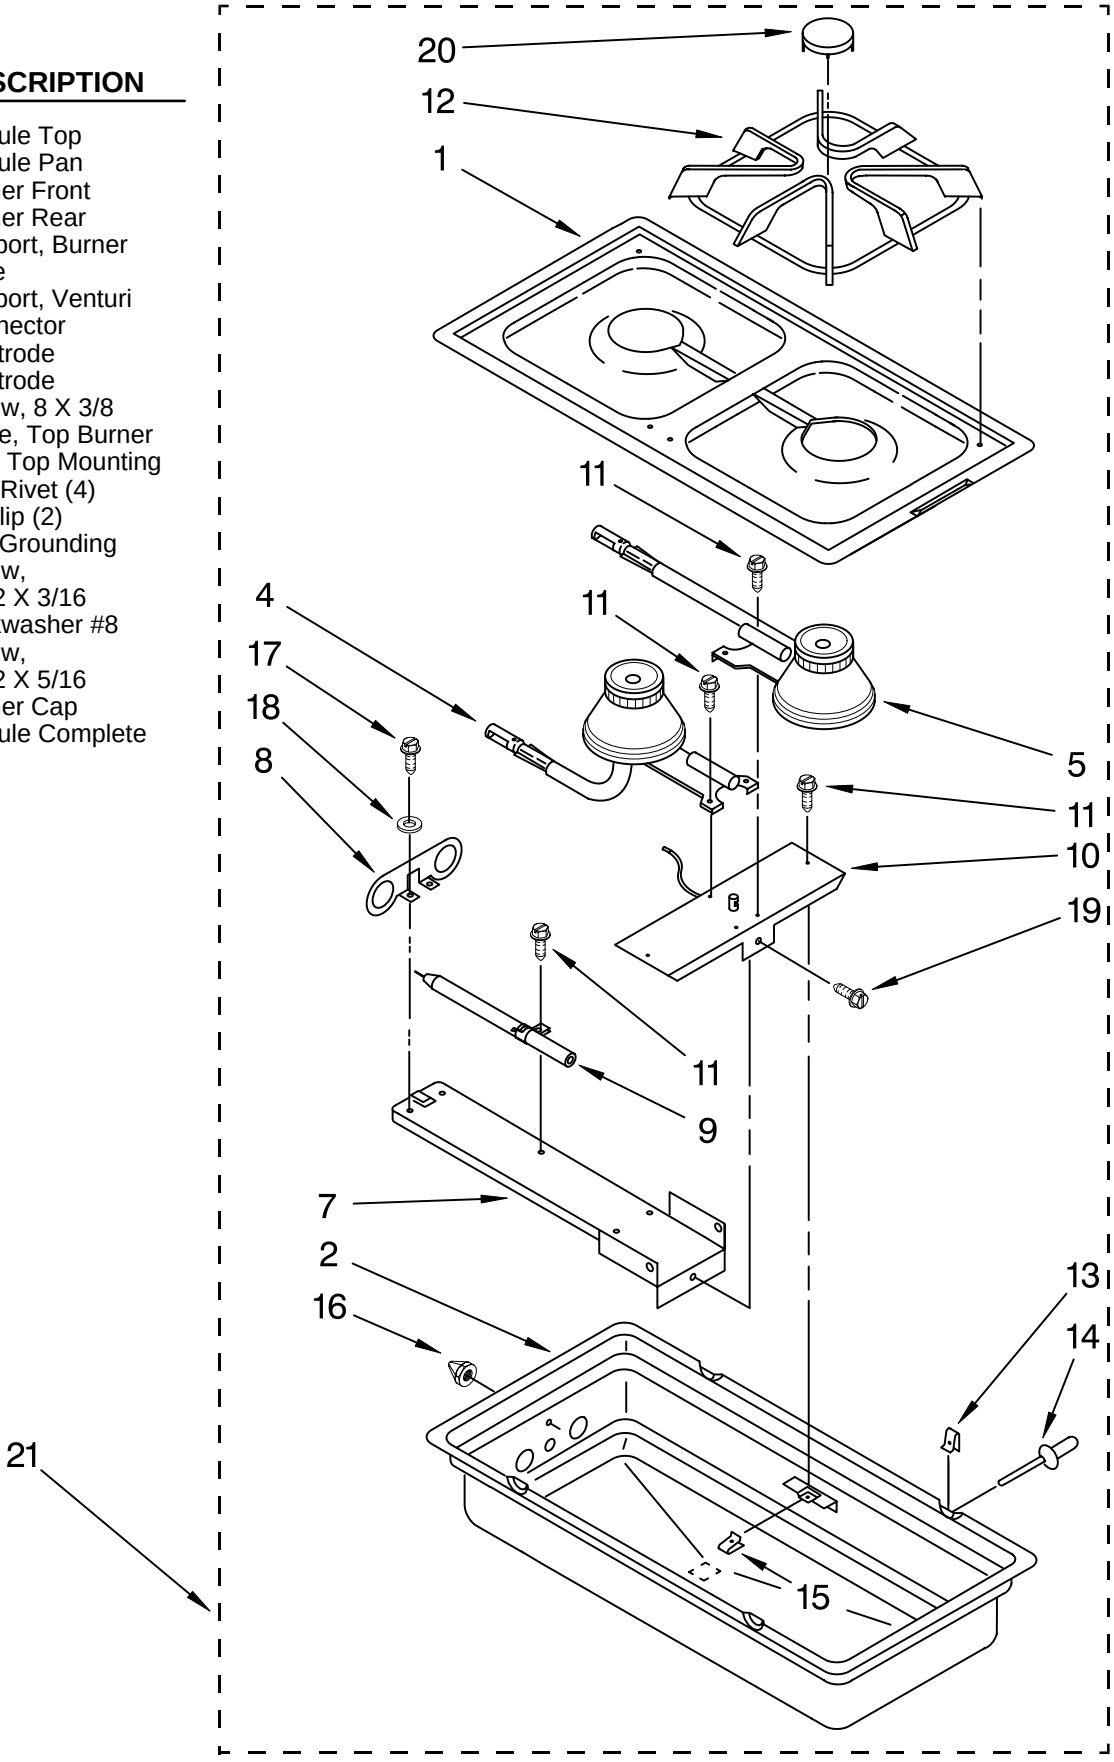

GRILLE MODULE PARTS

For Model: SS373PEX1

Illus. No.	Part No.	DESCRIPTION
1	4315615	Pan, Grille
2	786116	Burner Grille
4	786205	Electrode, Grille
5	786118	Support, Grille Burner
7	4314960	Grille (2)
8	786223	Screw, 8−32 X 5/16 (5)
10	786231	Screw, 8−32 X 3/16
11	786283	Lockwasher #8
13	786204	Pin, Grounding
14	4362694	Grille Module,
15	786265	Pan, Grease

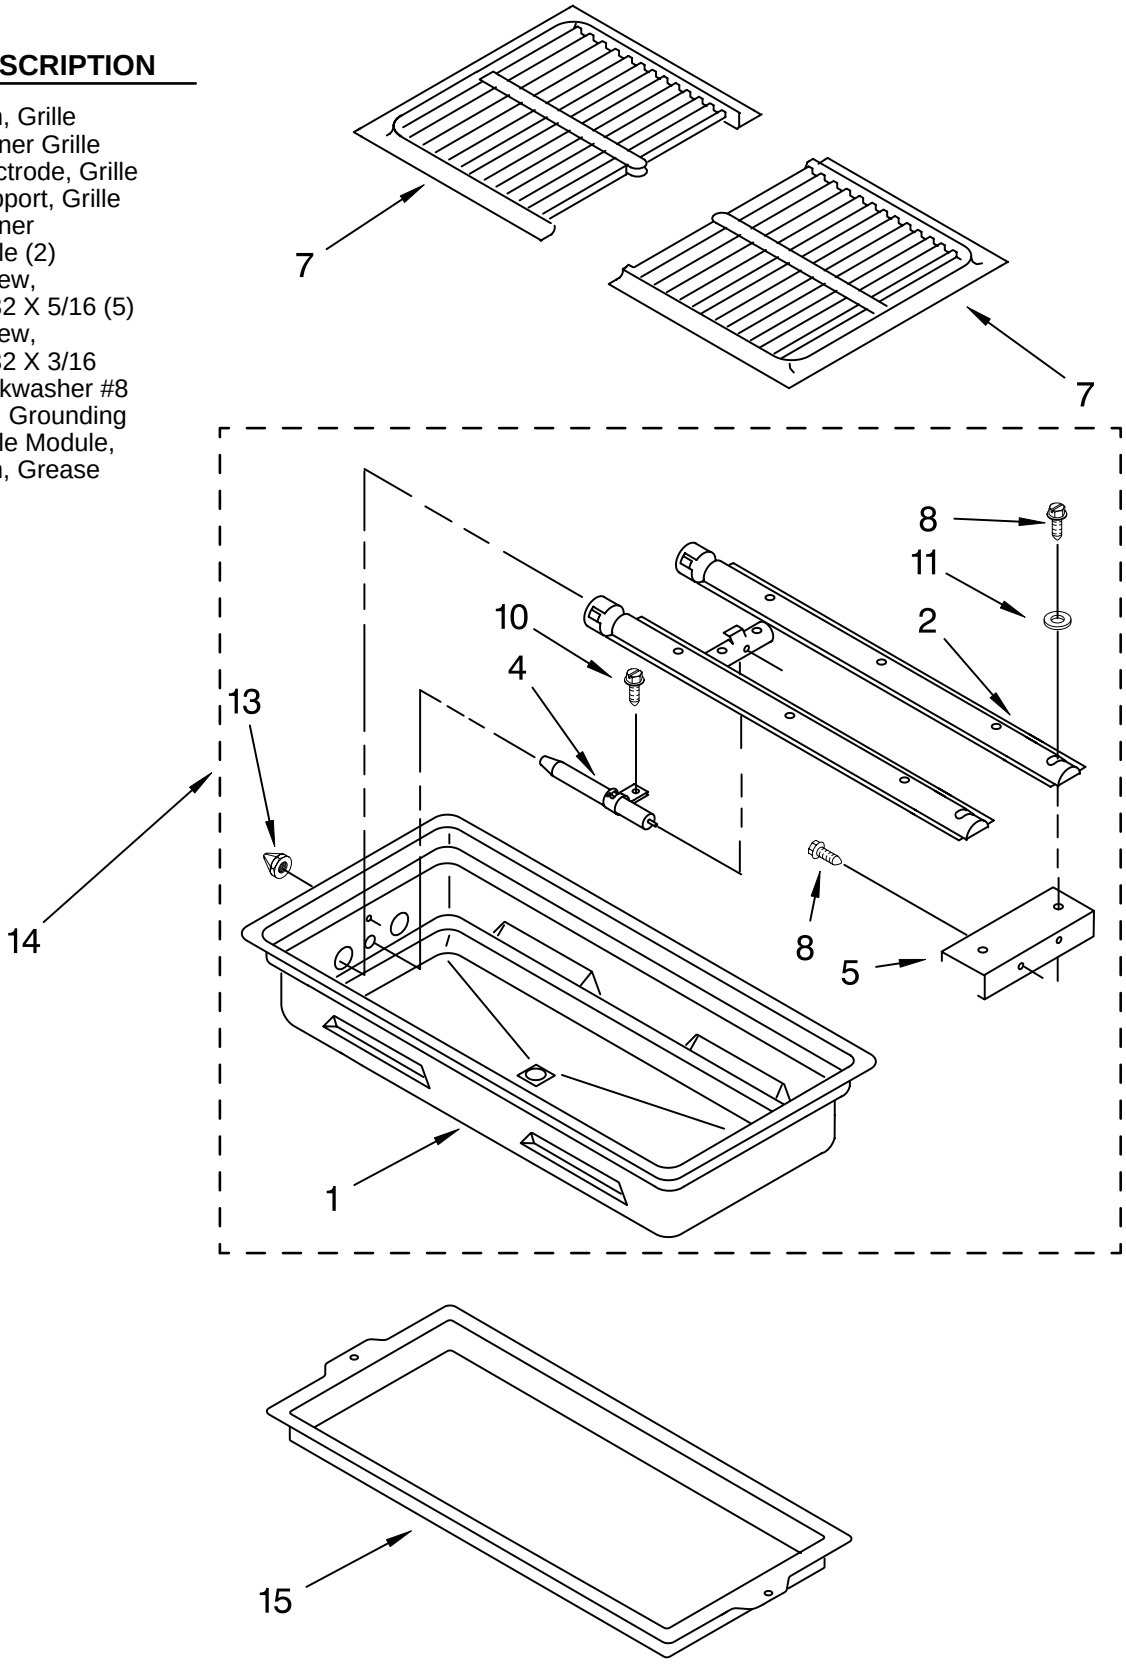

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

ROTISSERIE KIT (OPTIONAL)

For Model: SS373PEX1

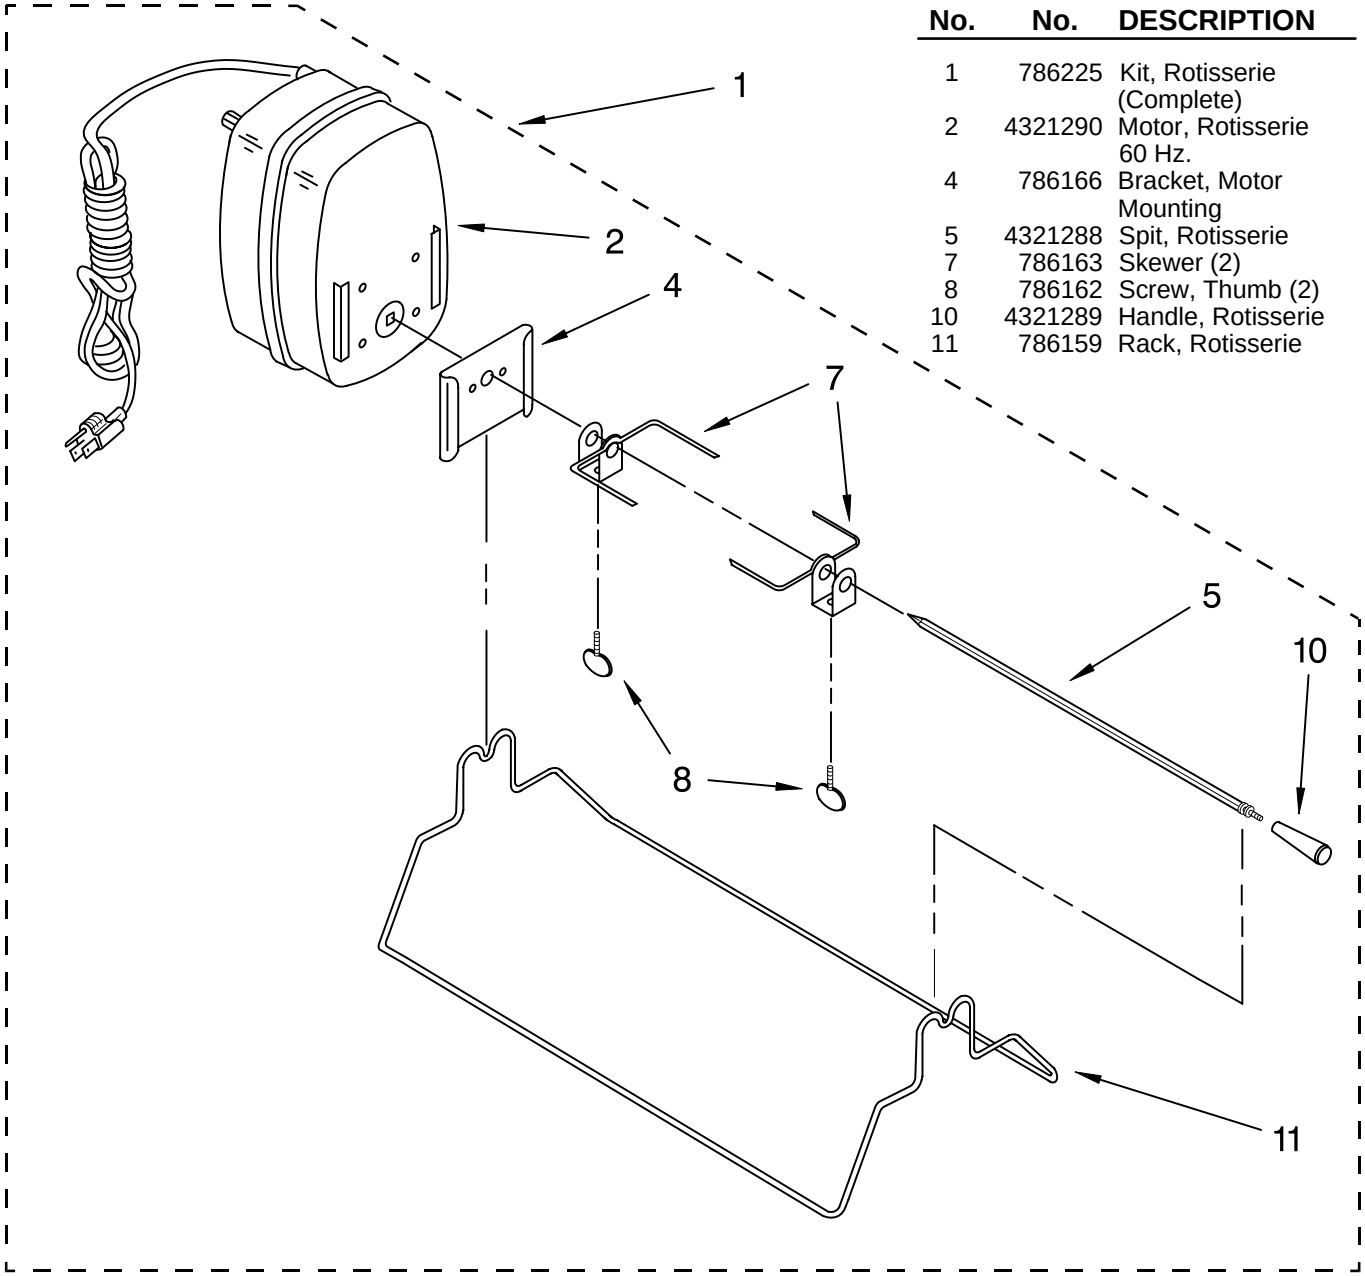

Illus. No.	Part No.	DESCRIPTION
1	786225	Kit, Rotisserie (Complete)
2	4321290	Motor, Rotisserie 60 Hz.
4	786166	Bracket, Motor Mounting
5	4321288	Spit, Rotisserie
7	786163	Skewer (2)
8	786162	Screw, Thumb (2)
10	4321289	Handle, Rotisserie
11	786159	Rack, Rotisserie

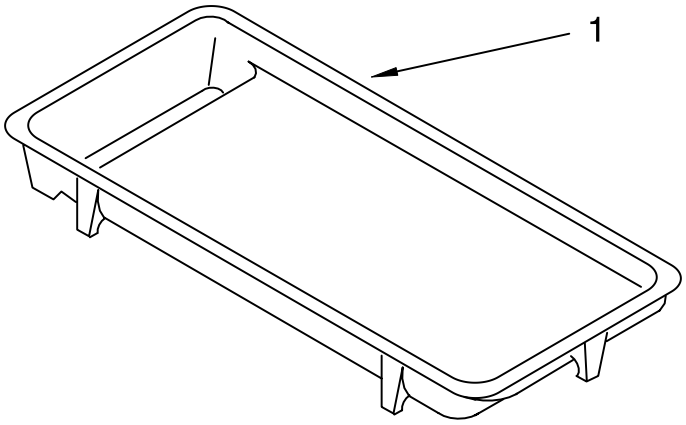

Illus. No.	Part No.	DESCRIPTION
1	786100	Griddle

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

ELECTRICAL OVEN PARTS

For Model: SS373PEX1

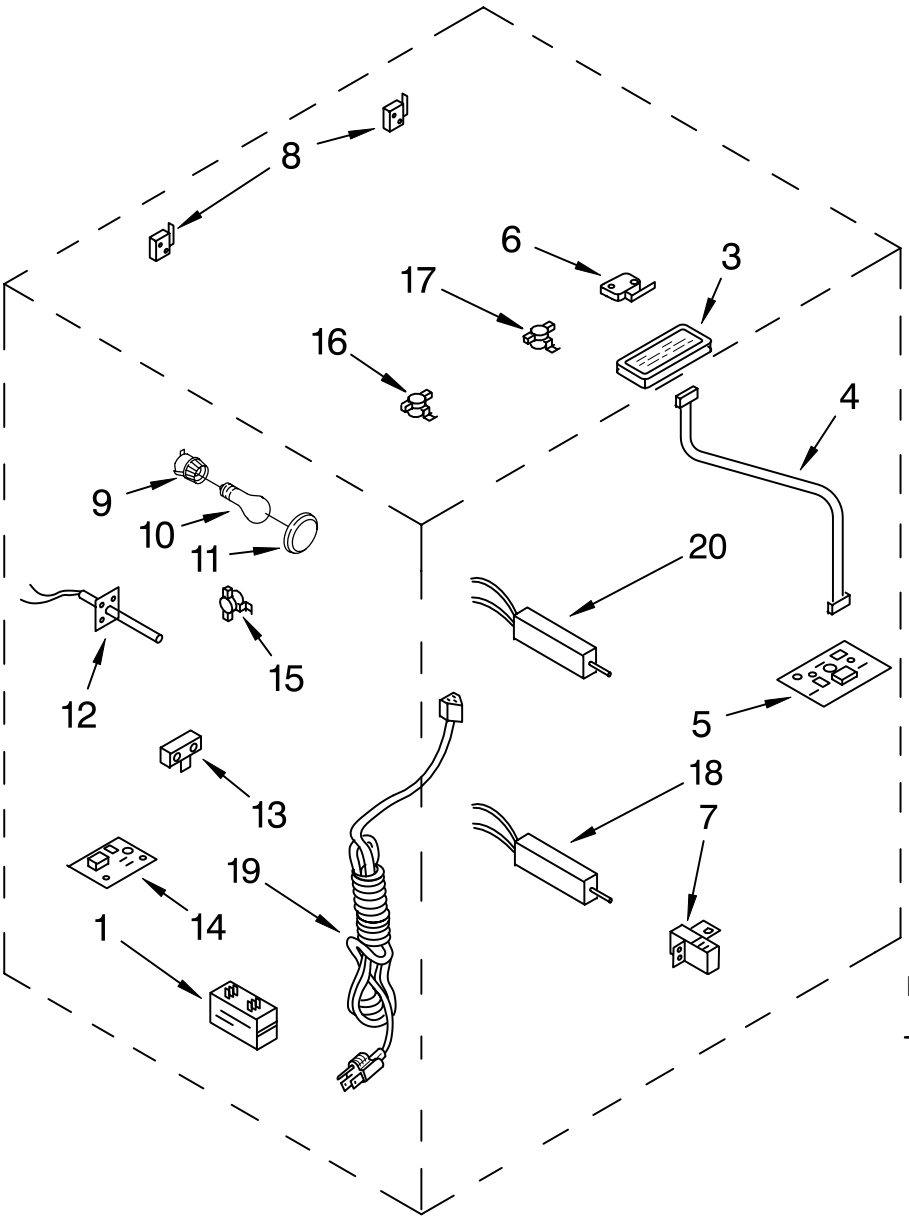

Illus. No.	Part No.	DESCRIPTION
1	4363272	Module, Spark
3	4321040	Board, Clock
4	4321065	Cable, Clock
5	4321066	P.C. Board, Power Supply
6	786669	Switch, Latch
7	786196	Plug, Block
8	4179158	Switch, Interlock
9	4321075	Socket, Light
10	786742	Bulb
11	4320959	Lens, Light
12	4315255	Sensor, Oven
13	4315225	Block, Therminal
14	4362622	P.C. Board, Oven
15	4321067	Switch, High Limit
16	786246	Switch, Fan
17	4321069	Switch, Self−Clean
18	786659	Ignitor, Bake
19	4362664	Cord, Power
20	4320913	Ignitor, Broil

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST